

Instruction for Using Samsung Video Presenter

1. Power on (green button) the video presenter
2. Ignore USB message
3. Double click the video presenter icon on the instructor's computer
4. All adjustments to the video presenter must be done from the control panel on the front of the unit. Only adjustment the following:

Zoom	▼ out	▲ in
Iris (brightness)	▼ darker	▲ lighter
Focus	▼	▲

5. Enable LANSchool broadcast on the instructor's computer.
6. The video presenter can simply be powered off when you no longer need it.

Notes:

- There is a 4 second delay before any image is re-scanned and visible on the on the instructor's computer. For example, a new document placed on the video presenter will not appear immediately. Changes to Zoom/Iris/Focus also lag. Keep this in mind when using the control panel – push the adjustment button (firmly) once or twice and wait to see the result.
- Iris and Focus may need adjustment after using Zoom
- Do **not** change setting other than Zoom, Iris or Focus on the control panel.
- Do **not** use the control window (remote control image) in the video presenter software
- Power off the Video Presenter if not use it